

使用 说 明

1.分机呼叫主机，按一下分机报警按钮即可。

2.主机呼叫分机，床号前加“88”。如呼叫05号分机，按“8805”，对所有分机广播，按“8899”。

3.在主机上清除报警信号，床号前加“#”。如清除16号分机报警，按“16#”，全部清除按“99#”，如不进行人工操作，主机会在3分后自动清除。

4.在分机上清除报警信号，按住分机报警按钮至红灯变为绿灯即可。

5.设置护理等级，床号后加等级（0为特级护理，指示灯为黄色；1为一级护理，指示灯为红色；2为二级护理，指示灯为绿色；3为三级护理，指示灯不亮），再加“#”。如18床特级护理，按“180#”，5床一级护理，按“051#”。

6.设置新病人标志，床号后加“5#”，该床指示灯闪烁；撤销新病人标志，床号后加“6#”。如设置18床为新病人，按“185#”，撤销，按“186#”。

7.设置报警声音种类，种类（共9种）后加“*”。如选择第八种报警声音，按“8*”，（1—7种为蜂鸣声，8—9为音乐声）。

8.设置报警声音时长，开机时的报警时长是20秒。如设置报警时间为8秒，按“08*”，想设置为25秒，按“25*”。

9.平时主机与显示屏都显示时间，有呼叫时，显示床号，按“0830#”设置上午8时30分，按“1520#”设置下午15时20分。如显示屏与主机时间不一致，挂断电话即可。

10.开、关大型显示屏声音，如晚上安静时关闭走廊大屏声音按“000*”，开启按“111*”。

11.开机后，由于本系统处于待机状态，表示护理级别的指示灯会出现无规则的闪烁，按996#和993#键即可将它清除。

Operating instructions

1. Press the alarm button of the extension bell call to call the main engine.
2. Add “ 88 ” in front of the bed number to call the extension bell call. For example, press “8805” to call the 5th bed, and press “8899” to broadcast.
3. Add “ # ” in back of the bed number to clear the alarm. For instance, press “16#” to clear the 16th extension bell call, and press “99#” to clear all the alarm.
4. Press the alarm button in the extension bell call until light changes from red to green in order to clear the alarm.
5. Add four ranks (0, 1, 2, 3) and “#” in back of the bed number to set up the nurse grade. For example, press “180#” to set up the top grade nurse for the 18th bed with the yellow light, press “051 #” to set up the first grade nurse for the 5th bed with the red light, press “162#” for the 16th bed with the green light, and press “053#” for the 5th bed with no light.
6. Add “5#” in back of the bed number to set up the mark for the new patient. Add “6#” to clear the mark. For example, press “185 #” to mark the 18th bed the new patient with light flashing, and press “186 #” to clear the mark.
7. Press “8*” to select the 8th sound. There are 9 types of alarm sound from 1 to 9.
8. The original alarm time length is 20 seconds. Press “08*” to set up the alarm time of 8 seconds, press “25*” for 25 seconds.
9. The main engine display monitor shows the time with no alarm. Press “0830#” to set up the time of “8:30am”, and press “1520#” for “15:20pm”. When the time between the main engine and the large-scale display monitor is not the same, it will be ok to hand up the phone.
10. Press “111*” to turn on the large-scale display monitor sound, and press “000*” to turn off the sound.
11. When u turn on the main engine, the lights might flash irregularly. Press “996#993#” to clear all the lights.